



12244 Notenpultleuchte

» Double2 LED FlexLight «

1. Ausstattung & Abmessungen

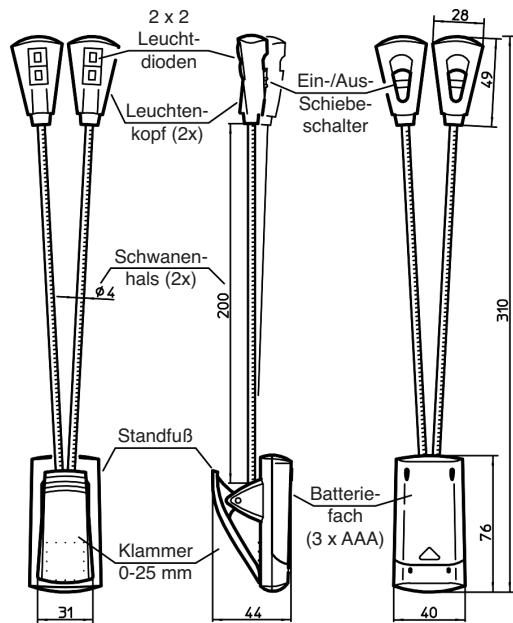


2. Batterien/Akkus einsetzen oder wechseln

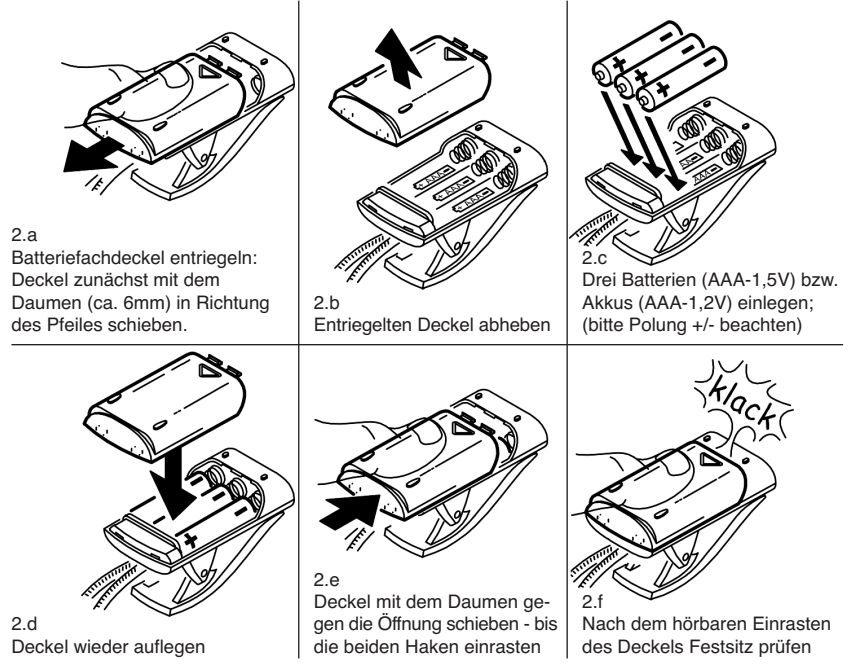


3. Lampe platzieren

3.a an PLATTEN

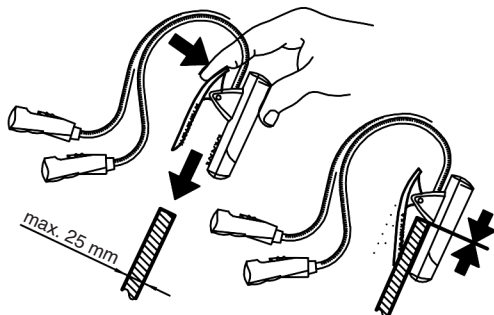


- 3.a.1 Klammer drücken und über die Notenpult- oder sonstige Platte (max.25mm) schieben...
- 3.a.2 ...bis die Platte am unteren Anschlag der Klammer innen anstößt

3.b an K&M-NOTENKÖPFEN

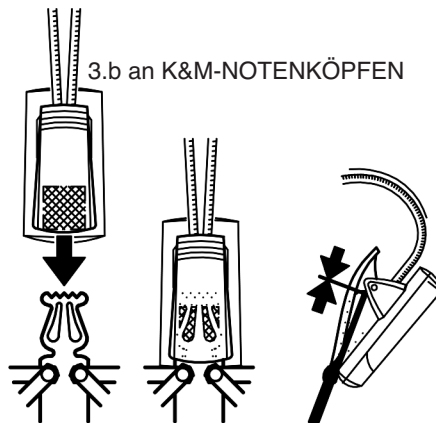

- 3.b.1 Klammer drücken und über die mittige platzierte Lyra des Notenkopfes schieben...
- 3.b.2 ...bis die Platte am oberen Anschlag innen anstößt


3.c auf TISCHEN und ABLAGEN

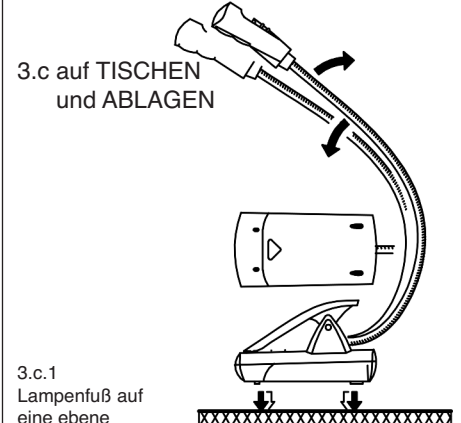

- 3.c.1 Lampenfuß auf eine ebene Unterlage stellen. Vier Auflagepunkte sorgen für einen wackelfreien Stand
- 3.c.2 Für die optimale Balance ggf. die Schwanenhäse mitsamt Leuchtkopf etwas korrigieren


4. Licht Ein- und Ausschalten

Beide Leuchtenköpfe sind unabhängig voneinander schaltbar

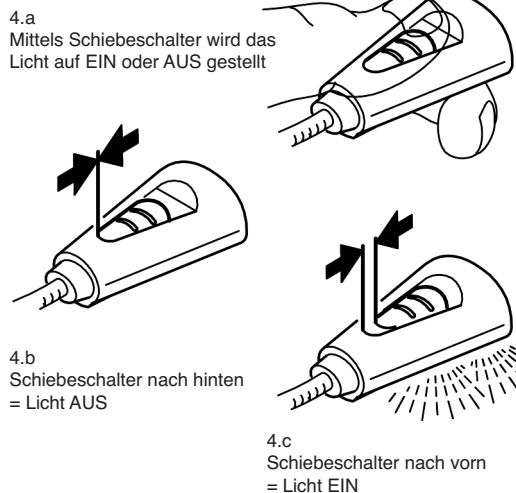

- 4.a Mittels Schiebeschalter wird das Licht auf EIN oder AUS gestellt
- 4.b Schiebeschalter nach hinten = Licht AUS
- 4.c Schiebeschalter nach vorn = Licht EIN

5. Leuchtkopf einstellen

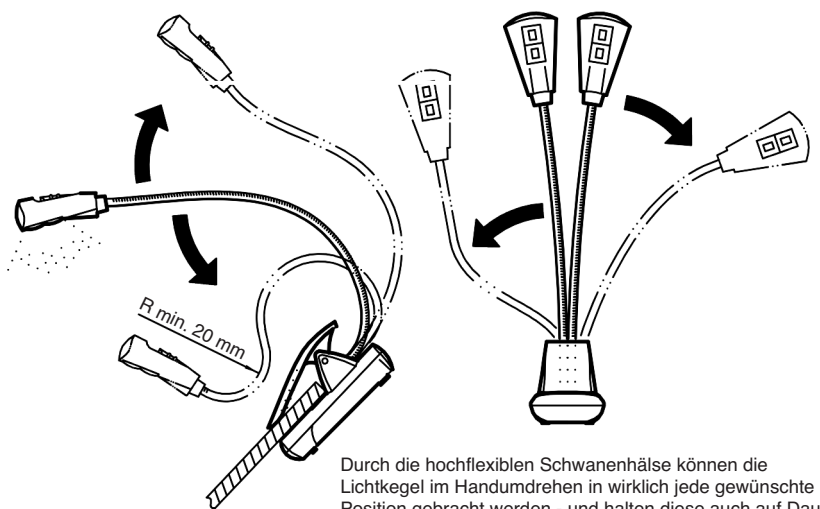


Durch die hochflexiblen Schwanenhäse können die Lichtkegel im Handumdrehen in wirklich jede gewünschte Position gebracht werden - und halten diese auch auf Dauer.

12244 Music stand light

» Double2 LED FlexLight«

1. Equipment & Dimensions

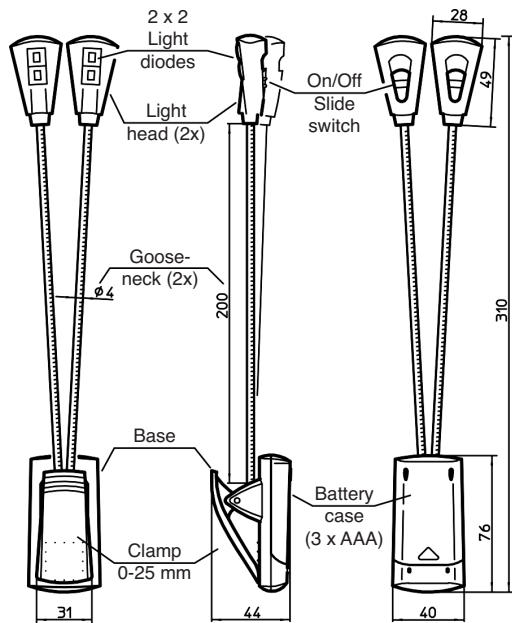


2. Batteries/rechargeable batteries insert or change

<p>2.a Battery case lid: Slide the lid with your thumb (approx. 6 mm) in the direction of the arrow.</p>	<p>2.b Unlock the lid and lift</p>	<p>2.c Insert three batteries (AAA-1.5V) i.e. rechargeable batteries (AAA-1.2V); (please pay attention to the poles +/-)</p>
<p>2.d Place the lid on the compartment</p>	<p>2.e Slide the lid with your thumb over the opening until both hooks click into place</p>	<p>2.f After the "click" ensure that the lid is securely in place</p>


3. Placement of the lamp

3.a to the PLATES

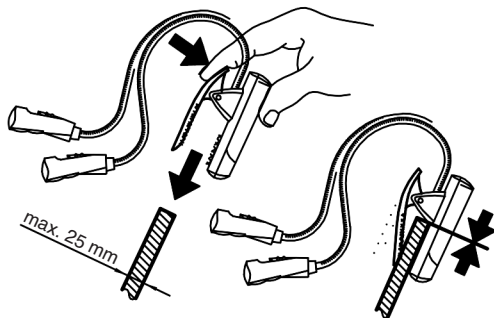


- 3.a.1 Press the clamp and slide the music desk or other plate (max. 25 mm)...
- 3.a.2 ...until the plate reaches the inside of the lower end of the clamp

3.b to K&M-NOTE HEADS

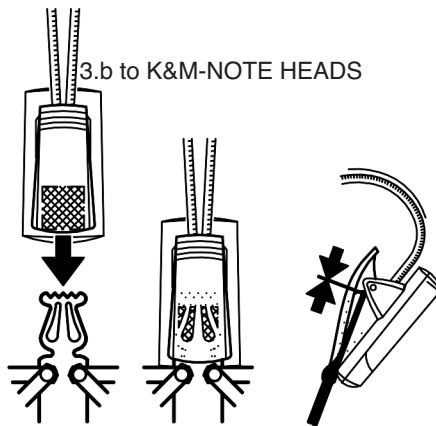

- 3.b.1 Press the clamp and slide the Lyra placed in the middle of the note head...
- 3.b.2 ...until the plate reaches the inside of the upper end of the clamp


3.c on TABLES and TRAYS

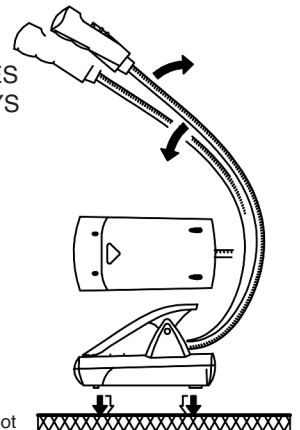

- 3.c.1 Place the lamp foot /base on a level surface. Four points of support ensure stability
- 3.c.2 To attain optimal balance adjust the goosenecks and the light head a bit


4. Turn Light On/Off

Both light heads can be turned on or off independently of each other

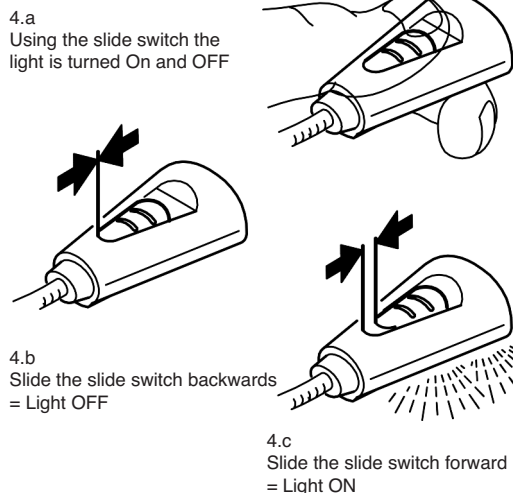

- 4.a Using the slide switch the light is turned On and OFF
- 4.b Slide the slide switch backwards = Light OFF
- 4.c Slide the slide switch forward = Light ON

5. Adjust the Light Head

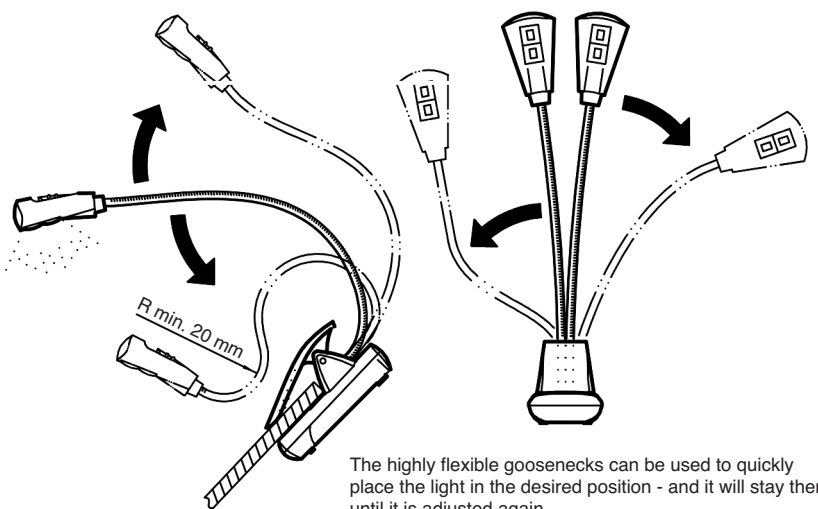

The highly flexible goosenecks can be used to quickly place the light in the desired position - and it will stay there until it is adjusted again.