


Spare parts list

118/4 Orchestra music stand

11841-000-02 - chrome stand, walnut wooden desk

*Rev 11

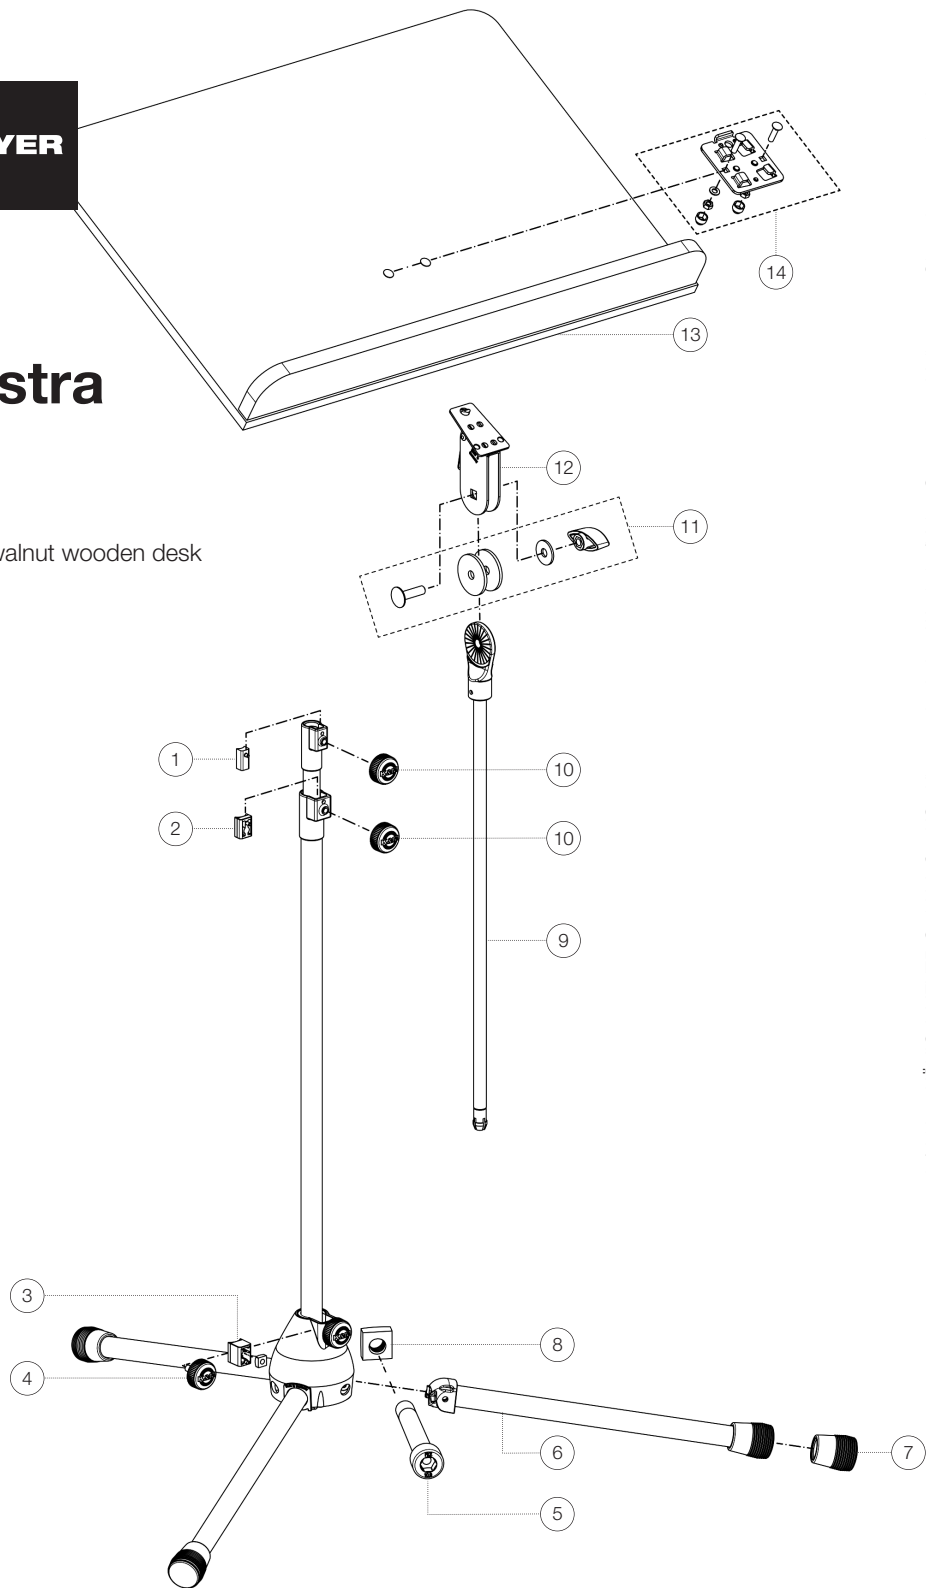

Position	Description	Article No.	Quantity
1	Clamping element with pin R6	01-86-620-55	1
2	Clamping element with pin R7.5	01-86-630-55	1
3	Clamping element with pin R10	6-86642-1-55	1
4	Knurled screw with logo M6 x 22 mm	01-82-948-55	1
5	Allen screw M5 x 36 mm	03-02-176-29	3
6	Leg tube complete	6-21025-1-02	3
7	End cap	01-84-980-55	3
8	Square nut M5	03-08-210-29	3
9	End tube with swivel head ø 16 mm complete	6-11840-1-02	1
10	Knurled screw with logo M6 x 10 mm	01-82-936-55	2
11	Screw connection of the music desk	3-00-000-065	1
12	Tilt connector with quick-release fastener complete	6-11810-5-55	1
13	Music desk	03-55-165-00	1
14	Accessories bag for connecting plate	3-00-000-134	1